

# Rapid Refresh®

## Armor™ Privacy Curtain Specification Sheet

### Standard Pattern and Colors

- RR-8000 Circles
- RR-8000 Fall
- RR-8000M Meadow
- RR-8000TM Tan Meadow
- RR-8000 Sky
- RR-8000 Winter
- RR-8000BP Beige Pattern
- RR-8000TF Teal Flower
- RR-8000RB Rainbow
- RR-8000 Dusk
- RR-8000 Dawn



A durable, non-leaching Antimicrobial (AEM 5700) coating protects treated surfaces by inhibiting the growth of stain and odor-causing bacteria, mold, mildew and fungi. The antimicrobial coating repels these microorganisms without leaching into the environment. Curtains are also available without this antimicrobial coating.

**Armor Protection:** Synpela is a silane-based technology that will protect the fabric from bodily fluids, betadine, blood, ink, and oil.

**Fluid & Stain Guard:** The fabric is multi-coated with Aqueous-based microporous polymers. It can be wiped clean with hospital approved cleaners/disinfectants.

**Flame Retardancy:** Complies with NFPA 701 Small scale

**Size:** 108" (w) X 66" (h), panels easily snap together for complete coverage and privacy

**Material:** 100% Polyester, not made with natural rubber latex.

**Curtain Change Tracking:** Each curtain has a RFID chip and label which can be used with your hospital's cleaning/tracking software.

**Warranty:** Two year warranty.

**Laundrying:** Spot clean with a non-bleach cleaner/germicidal. If laundrying is required, wash in warm water, not to exceed 160°F. **NO Bleach.** Tumble dry in cool cycle, do not over dry. Do not dry clean or add antibacterial spray.



TO ORDER:

[info.ICPMedical@teamtech.com](mailto:info.ICPMedical@teamtech.com)

| 1-800-405-3044

| [www.icpmedical.com](http://www.icpmedical.com)

# Rapid Refresh®

## Armor Privacy Curtain Specification Sheet

### Rapid Refresh Privacy Curtains Adapter Kit

- Adapts to all existing tracks and hooks
- Replaces Mesh
- 9 Standard Sizes: (3.5, 9.5, 12.5, 15.5, 18.5, 21.5, 24.5, 27.5, 33.5)
- Adapter size is determine by the length of the rod plus 3.5" for other components, RR-21.5: 21.5"+3.5"=25"
- Magnet to align rods when changing the curtain
- Material: Polycarbonate and a magnet



Metal D-Ring

Rod

Rod Housing



TO ORDER:


[info.ICPMedical@teamtech.com](mailto:info.ICPMedical@teamtech.com)

| 1-800-405-3044


| [www.icpmedical.com](http://www.icpmedical.com)

## Rapid Refresh® | Privacy Curtains


Rapid Refresh® Privacy Curtains are as aesthetic as they are functional. Designed to fit any decor, choose from these standard colors and patterns to complement your environment.

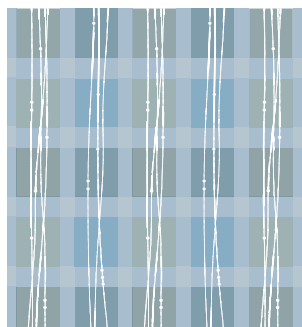

Winter Curtain  
RR-8000W

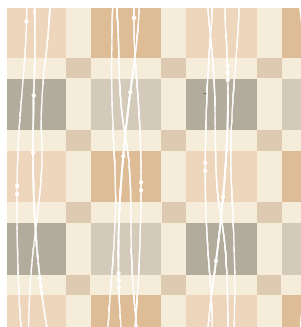


Fall Curtain  
RR-8000Fall

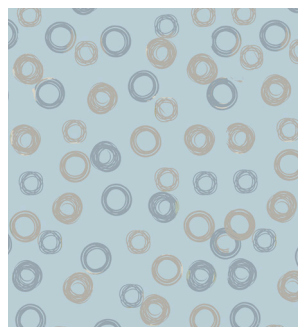


Sky Curtain  
RR-8000Sky



Circles Curtain  
RR-8000Circles

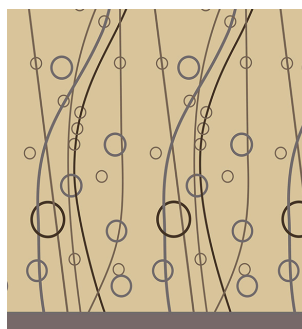


Tan Meadow Curtain  
RR-8000TM

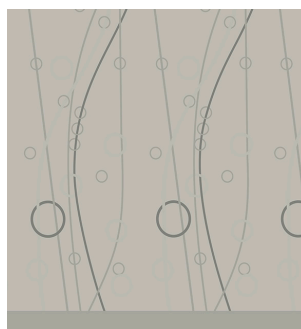


Meadow Curtain  
RR-8000M




Rainbow Curtain  
RR-8000RB

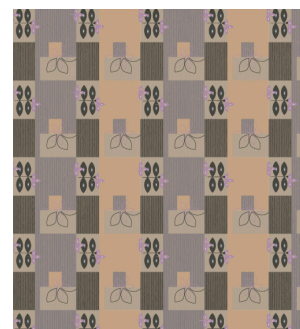

Beige Pattern Curtain  
RR-8000BP

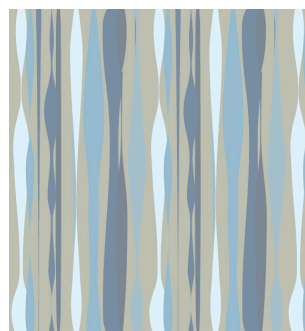

Dawn Curtain  
RR-8000Dawn

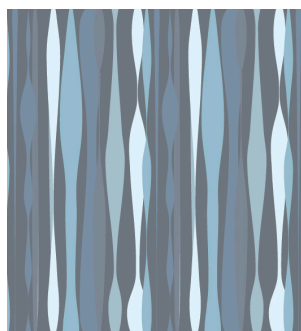

Dusk Curtain  
RR-8000Dusk



Teal Flower Curtain  
RR-8000TF



TO ORDER:

[info.ICPMedical@teamtech.com](mailto:info.ICPMedical@teamtech.com)

| 1-800-405-3044

| [www.icpmedical.com](http://www.icpmedical.com)